

# *Custom All Aluminum Stacker Trailers*

## **BUILT FOR SPEED**

*High Quality Trailers Built by Racers for Racers*

**SEMI, GOOSENECK, FIFTH WHEEL AND PULL-A-LONG TRAILERS**

## **O'BRIEN STACKER TRAILER**



Call for a Quote - 815.426.2761

[www.tande-racetrailers.com](http://www.tande-racetrailers.com)







DANGER PINCH POINT

TE  
Aluminum

FIRE





**CAUTION** Do not touch the nozzle or the heat gun body while it is hot. Allow the heat gun to cool before handling.

**CAUTION** Secure all loose wires before using the heat gun.

**WARNING** Do not walk on the heat gun.

**WARNING** Do not use the heat gun on flammable materials.

**ALWAYS WEAR** Safety glasses when using the heat gun.

**DANGER** Hot Surfaces Can Cause Burns or Fire.







































Warning: This product is not to be used as a fire extinguisher. For more information, please refer to the user manual. The manufacturer is not responsible for any damage or injury caused by the use of this product. © 2010 [Company Name]. All rights reserved.





# **▲ DANGER**

Vehicles and equipment powered by internal combustion engines and placed in recreational vehicles may cause carbon monoxide poisoning or asphyxiation, which could result in death or serious injury.

The flammable liquids used to power these items can cause a fire or explosion, which can result in death or serious injury.

To reduce risk:

1. Do not ride in the vehicle storage area when vehicles are present.
2. Do not sleep in the vehicle storage area when vehicles are present.
3. Close doors and windows in walls of separation (if installed) when any vehicle is present.
4. Run fuel out of engines of stored vehicles after shutting off fuel at the tank.
5. Do not store, transport, or dispense fuel inside this vehicle.
6. Open the windows, openings, or air ventilation systems provided for venting the transportation area when vehicles are present.
7. Do not operate propane appliances, pilot lights, or electrical equipment when motorized vehicles are present.









### Operating Instructions for T&E Enterprises Rear Lift Gate Door

#### **DANGER - EXTREMELY HEAVY DOOR**

**Failure to operate the door in the appropriate manner may result in severe injury or death. Severe damage to door mechanism may also occur.**

**Please carefully read operating instructions and manual before operating the rear lift gate door.**

#### **Preparatory steps to perform before opening door**

- 1. Make sure warning label (provided with label at the base of the door) that the lift gate will be opened.
- 2. Check the opening area of the lift gate (located in the trunk) to be certain, double check that the opening area is clear of any items before opening the door.

#### **To Open Door**

- 1. To open the lift gate, push the "Up" button on the hand-held control to start the hydraulic pump. The door will rise to level the door out of the lip holder until the door stops automatically at the top.
- 2. **Do not lean or step on the opening lip** in the trunk. **DO NOT STAND UNDER THE DOOR WHILE THE DOOR IS OPEN.**
- 3. When the door is fully open, the lift gate will stop automatically. Failure to do so may result in serious injury.
- 4. When the door is not fully open, the lift gate will stop automatically. Failure to do so may result in serious injury.

#### **To Close Door**

- 1. To close the lift gate, push the "Down" button on the hand-held control to start the hydraulic pump. The door will lower to level the door into the lip holder until the door stops automatically at the bottom.
- 2. **Do not lean or step on the opening lip** in the trunk. **DO NOT STAND UNDER THE DOOR WHILE THE DOOR IS OPEN.**
- 3. When the door is fully closed, the lift gate will stop automatically. Failure to do so may result in serious injury.
- 4. When the door is not fully closed, the lift gate will stop automatically. Failure to do so may result in serious injury.

#### **To Close Door**

- 1. To close the lift gate, push the "Down" button on the hand-held control to start the hydraulic pump. The door will lower to level the door into the lip holder until the door stops automatically at the bottom.
- 2. **Do not lean or step on the opening lip** in the trunk. **DO NOT STAND UNDER THE DOOR WHILE THE DOOR IS OPEN.**
- 3. When the door is fully closed, the lift gate will stop automatically. Failure to do so may result in serious injury.
- 4. When the door is not fully closed, the lift gate will stop automatically. Failure to do so may result in serious injury.

















